

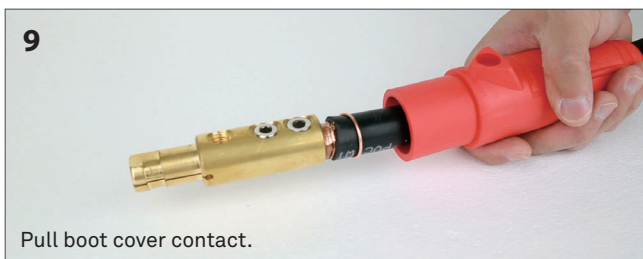
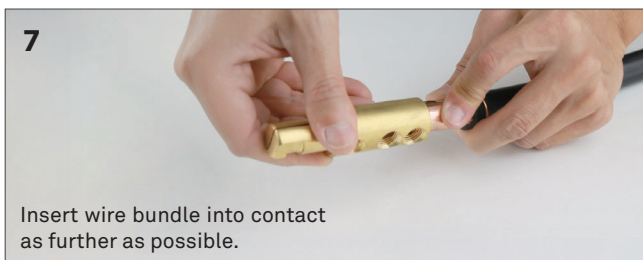
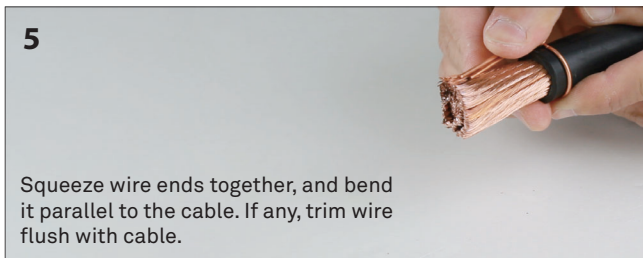
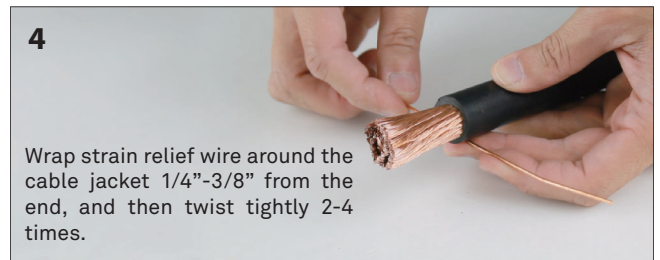


# Inline Connector Installation (10 Steps)

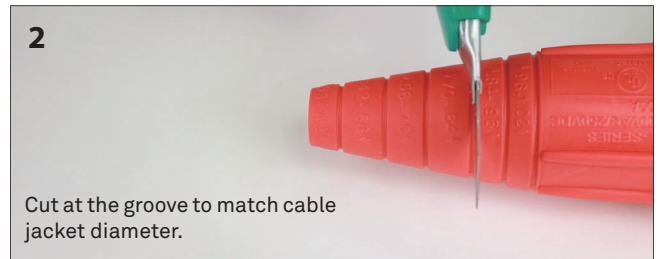

# Panel Mount Receptacle Installation (4 Steps)

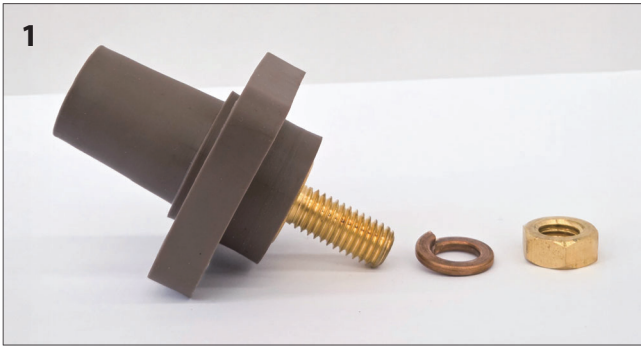

Remove the M12 nut and washer from the threaded post.



Screw the connector on the panel



Fit the terminal over the threaded post



Refit the washer and nut onto the threaded post, then tightn to max. of 12N/m